



CATALYST

COMPUTER SYSTEMS LTD



Granite House, 58 Loughborough Road, Mountsorrel, Leics, LE12 7AT
Tel: 0116 2301500 Fax: 0116 2301522 email: sales@catalyst-uk.com

Configuring Barcode Scanners

The defaults for the barcode scanners we at Catalyst supply are set to only allow barcodes with a minimum length of 3 characters, as such due to most customers labour codes being only 2 characters in length (the technicians initials) the new real-time labour code labels do not scan. The barcodes below will decrease this minimum scan length to 2 characters.

Its important however to scan them in the **EXACT** order shown below:

Reset Scanner



RESET_
Reset

Add a Carriage return Suffix to All Symbologies



VSUFCR.
Add CR Suffix
All Symbologies

Set Custom Defaults



MNUCDF.
Set Custom Defaults

Save



MNUSAV.
Save

Minimum Message Length



CBRMIN.
Minimum Message Length

0



KOK
0



K2K
2

Save



MNUSAV.
Save