



CATALYST
COMPUTER SYSTEMS LTD

Granite House, 58 Loughborough Road, Mountsorrel, Leics, LE12 7AT
Tel: 0116 2301500 Fax: 0116 2301522 email: sales@catalyst-uk.com



Configuring Barcode Scanners for scanning Labour code labels

The defaults for the barcode scanners we at Catalyst supply are set to only allow barcodes with a minimum length of 3 characters, as such due to most customers Labour codes being only 2 characters in length (the technicians initials) the new real-time labour code labels do not scan. The barcodes below will decrease this minimum scan length to 2 characters.

It is important however to scan them in the EXACT order shown below.

1.

Enter/Exit Configuration Mode



2.



Minimum Symbol Length

3.



Code Byte 0

4.



Code Byte 0

5.



Code Byte 2

6.

Enter/Exit Configuration Mode



Use the Barcode below to reset the scanner to default settings

Recall Defaults

